Product Dimensions


| Cover Size (OD x Height) | Downlighter Cut-out Size |
|--------------------------|--------------------------|
| 150 x 150 mm | 50-75 mm |
| 200 x 200 mm | 75-100 mm |
| 250 x 250 mm | 100-140 mm |

General Fitting Instructions

For detailed fitting instructions for various applications please contact **TENMAT**.




- Grasp legs firmly and roll cover into a tight cylinder.
 Ensure wiring loom is through slot before installation
- Keeping a tight grip on the legs, feed the cover through the cut out made for the downlighter
- Ensure cover has sprung back into its original cone shape

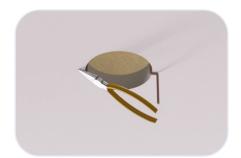

- Grasp legs and pull down until L section clears the underside of the ceiling
- Move legs out until vertical part of L section is flush with the side of the cut out
- Release the legs so they grip the underside of the tile
- Remove the excess of both legs



 Once cover is in place, downlighter can be fitted as normal, with transformer outside the cover

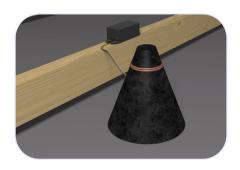

 If required, an intumescent sealant can be used to ensure a smoke and acoustic seal

