


# Advantage Letterplate Fitting Instructions


## Tools




Included:  
1 x Advantage Letterplate  
1 x Intumescent Liner  
Fixing Bolts and Screws

All dimensions in mm

10" Advantage letterplate

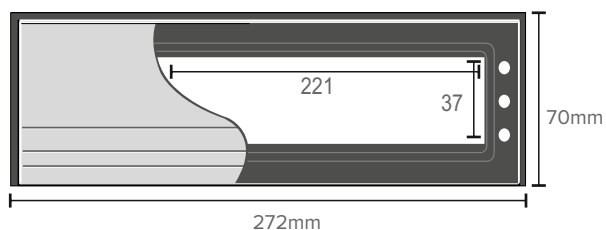


12" Advantage/Advantage Plus letterplate

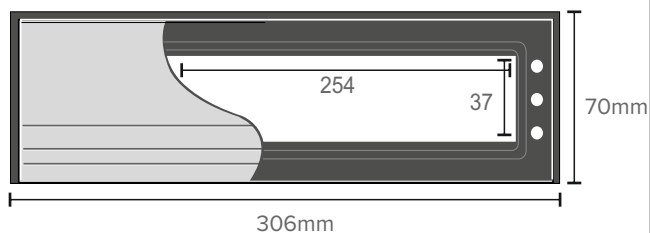

**1**





Intumescent liner

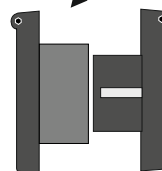

- 1.1** Remove the self-adhesive backing from intumescent liner.
- 1.2** Wrap the liner around the outer telescopic sleeve ensuring the self-adhesive tape makes full contact with the letterplate. **Note: do not cut liner, use full length as supplied**

**2**

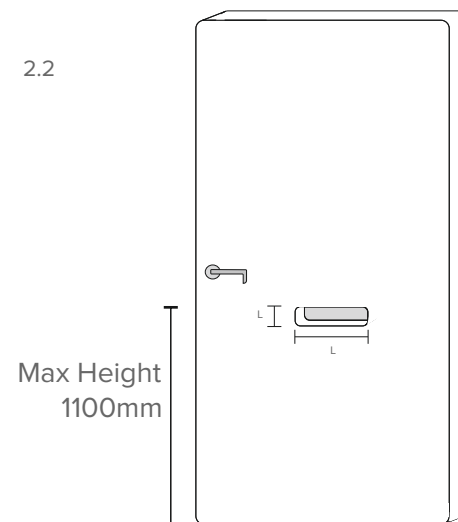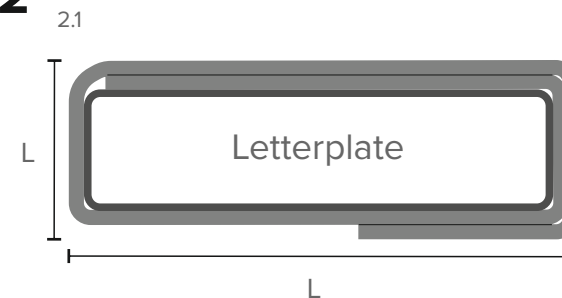


- 2.1** Measure the overall diameter of the outer telescopic sleeve with liner to assess opening size required (L)
- 2.2** Using a drill & jigsaw cut aperture in the door leaf to suit (L) ensuring this is no further than 1100mm from the door bottom.

## Advantage Letterplate Fitting Instructions

**3**


3.1

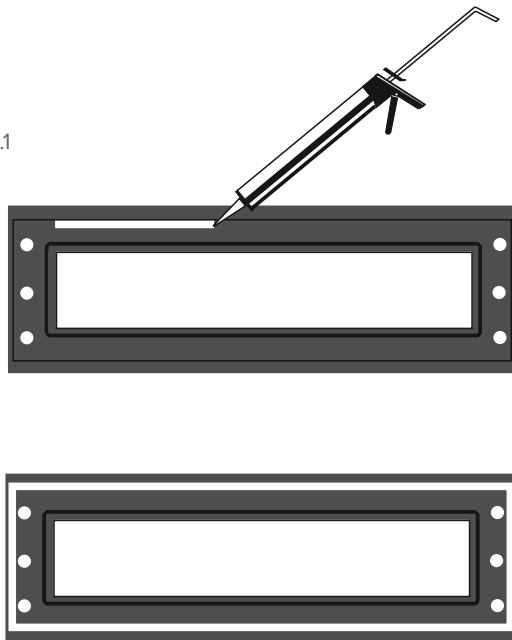


**3.1** Apply a bead of intumescent mastic (not supplied) behind both face plates.

**4**

4.1

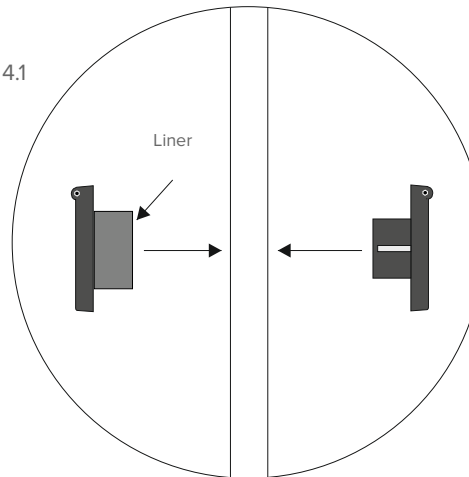

4.2

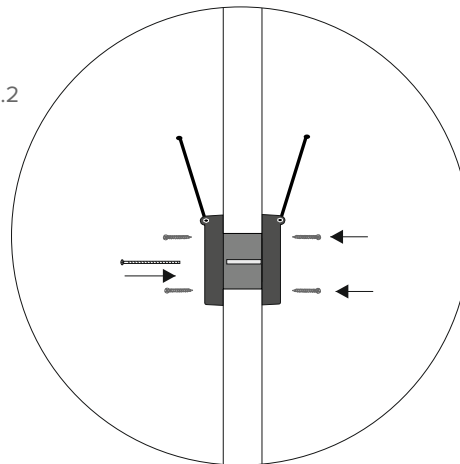


**4.1** Insert each side of the letterbox into the aperture making sure the side with the liner attached is on the inside of the door.

**4.2** Using bolts and screws provided secure letterbox to the door, use appropriate length bolts and one screw in each corner. Note: the corner screws are not required for installation of the Advantage Plus.

**5**

5.1

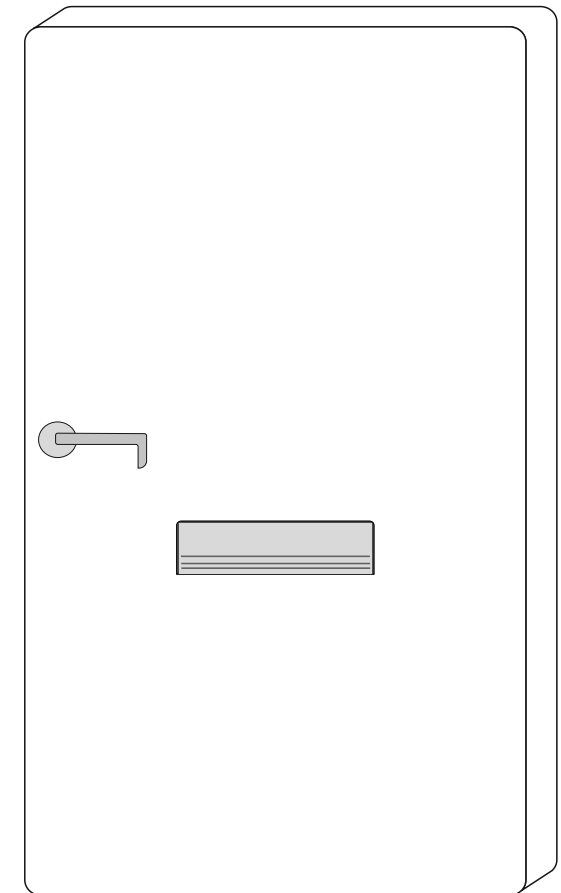

**5.1** clean off any excess mastic with a damp cloth. The unit is now installed.